

Opening and Closing

Your Sunpak 6200DX tripod is equipped with metal Center Leg Braces for maximum stability and strength.



Extend the leg sections to the desired length and secure each section using the Leg Locks. Pull each leg outward until all three braces are fully extended and gently press down on any brace until it stops and secure with the Lock Knob.

When closing the tripod, gently push up on any Leg Brace.

Precautions

- Insure that all levers, handles, knobs and leg locks are properly tightened, and that all three legs are fully angled opened before use.
- Do not mount any camera directly onto the head mount screw located on the top of the tripod's center column. The screw may be longer than the tripod socket in your camera, and could possibly cause damage.
- Do not carry or transport the tripod with the camera equipment attached (as example but not limited to: over your shoulder or cradled in your arms).
- Do not Oil or Grease any part of the tripod.
- Do not use any solvents or thinners to clean your tripod. Use mild detergent and wipe dry with a soft, lint-free cloth only.
- Do not store or expose your tripod to excessive heat or cold or use close to any flame or fire.
- Do not exceed the load limit for this product.

Sunpak Lifetime Limited Warranty

This Sunpak product has been carefully manufactured, accurately adjusted, inspected and thoroughly tested before shipment to assure you of the highest quality.

Should this product require service, we will repair or replace, at our option, any part or the product itself, which our examination shows to be defective in material or workmanship. This warranty does not apply to wear and tear associated with the normal use of the product. This warranty is non-transferable.

Repairs will be made to the product at no charge, under the terms of the warranty as stated above, only when accompanied by a dated and itemized bill of sale and nominal handling charge.

Be certain to follow all assembly and/or operating instructions with this product. This warranty is not valid if the product has been misused or damaged in any way that is beyond our control or through normal wear and tear associated with use. This warranty applies only to the product and we are not responsible in any way for losses, damages or any inconvenience caused by equipment failure.

Some states do not allow the exclusion or limitation of consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights which may vary from state to state.

Should service be required, the product should be carefully packed (in the original packaging if possible) and sent, prepaid and insured, along with a check or money order for \$9.95 (shipping and handling), to the address listed below. A note briefly describing the nature of the defect should also be enclosed to expedite handling.

Proof of purchase and payment for shipping and handling must be included for warranty repairs.

OWNER'S RECORD

Please complete this section and retain with your original bill of sale for your records.

Model: Sunpak 6200DX Tripod
Purchase Date: _____
Address: _____
City: _____
State: _____
Zip Code: _____

Sunpak
ToCAD America Inc.
53 Green Pond Road
Rockaway, NJ 07866
tocad.com

Sunpak 6200DX digital tripod



Cat. no. 620-620

Specifications

Maximum Height:	61.2" (155.4 cm)
Minimum Height:	22.5" (57.1 cm)
Folded Length:	22.5" (57.1 cm)
Weight:	3.1 lb (1.4 kg)
Load Capacity:	4.4 lb (2.0 kg)
Leg Diameter:	0.9" (28.8 mm)
Leg Sections:	3

Tripod Components

1. Vertical Tilt Lock Knob
2. Pan and Tilt Handle
3. Quick Release Plate with Video Indexing Pin
4. 3-Way Panhead with Panoramic Index
5. Center Column Lock Knob
6. Elevator Crank Assembly
7. Geared Center Column
8. Leg Brace
9. Flip Lever Leg Lock
10. Rubber Foot with Retractable Spike



Quick Release Plate

Move the Quick Release Locking Lever outward and remove the Quick Release Plate by lifting upward. The plate has a threaded ¼" - 20 camera mounting screw for camera attachment.

Position the Quick Release Plate so that the camera mounting screw aligns with the matching receptacle on your camera or camcorder and attach, using the camera mounting screw. Move and hold open the Quick Release



Lock Lever and with the camera tilted slightly down, slide the Quick Release Plate back into position. After doing so, secure the Quick Release Plate using the Quick Release Locking Lever by pressing firmly until it stops.

Using the 3-way Panhead

For panning and tilting, loosen the Pan and Tilt Handle, by turning the handle counterclockwise. Tilt the Panhead as desired and retighten by turning clockwise or leave loose for panning.

To change the camera format from horizontal to vertical, loosen the Vertical Tilt Lock Knob (1) and rotate the camera platform (2) 90 degrees to the left to its vertical position. Retighten the Vertical Tilt Lock Knob.



Height Adjustments

Your Sunpak 6200DX tripod is equipped with a Geared Center Column and Elevator Crank Assembly for precise height adjustments.

To raise or lower the Center Column, loosen the Center Column Lock Knob (1). Turn the Elevator Crank Assembly Knob (2) clockwise until you reach the desired height. Retighten the Center Column Lock Knob to secure.

Note: Never release your camera until the Center Column Lock Knob is securely retightened.



Extending the Legs

To extend, flip open the Flip Lever Leg Locks and gently pull on the leg segment to the desired length. To secure in position, press the leg lock lever until it is locked. Not properly securing a leg lock may cause the tripod leg to retract unexpectedly and result in damage to your camera and tripod).

Leg Spikes

For indoor use, rotate the rubber feet to retract the leg spikes. For outdoor use and surfaces where leg movement is a problem, rotate the rubber feet clockwise to expose the leg spikes. Be sure to retract the leg spikes when used indoors or on surfaces that can be damaged.

